




Download CenoBots APP for more information.

This guide is intended for quick consultation only and does not replace the user manual. Before operating or maintaining the machine, read the user manual carefully and strictly follow all the instructions.


Daily Maintenance



Turn off the robot and open the left door.

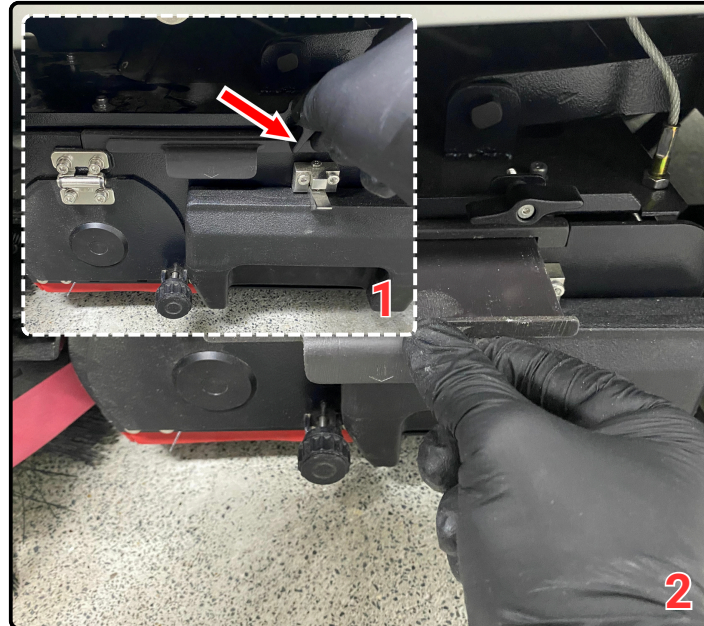


Release the clip, remove the filter mesh and clean it.

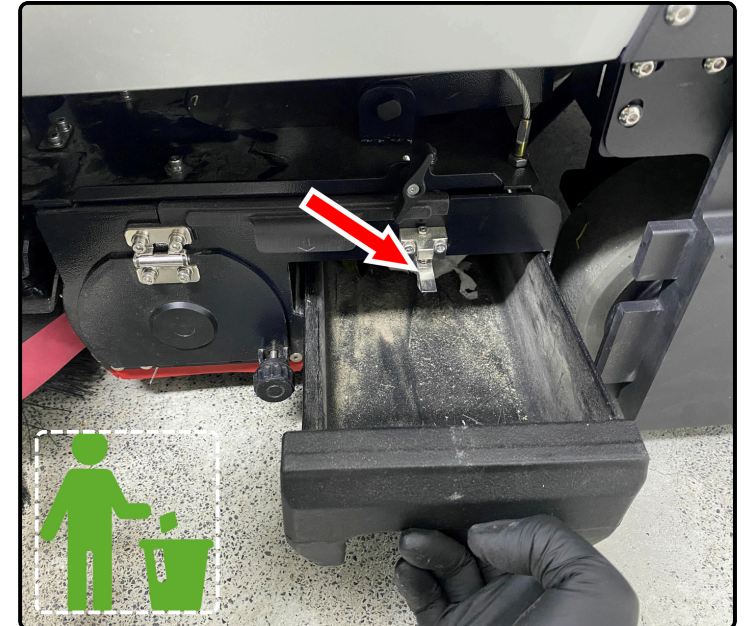


Release the clip, remove the trash tray and empty it.

Daily Maintenance

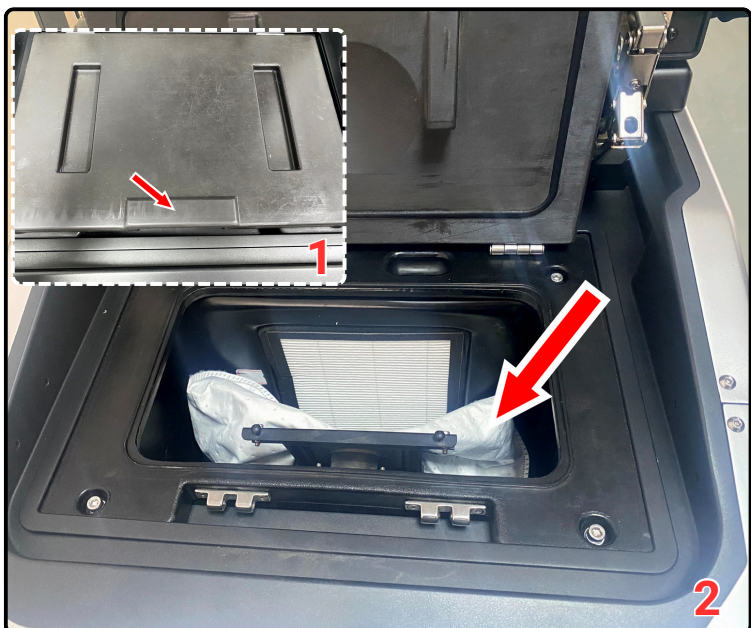

Open the dustbin lid and check the dust bag for damage.

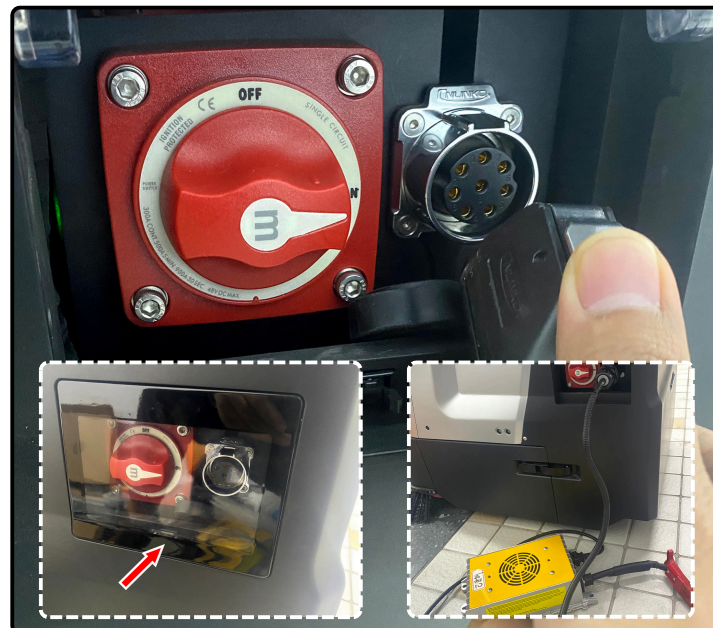


Charge the battery.
*Turn the **red** switch to 'OFF' position when charging.



Loosen the knob, remove the roller brush and clean the brush.


Weekly Maintenance

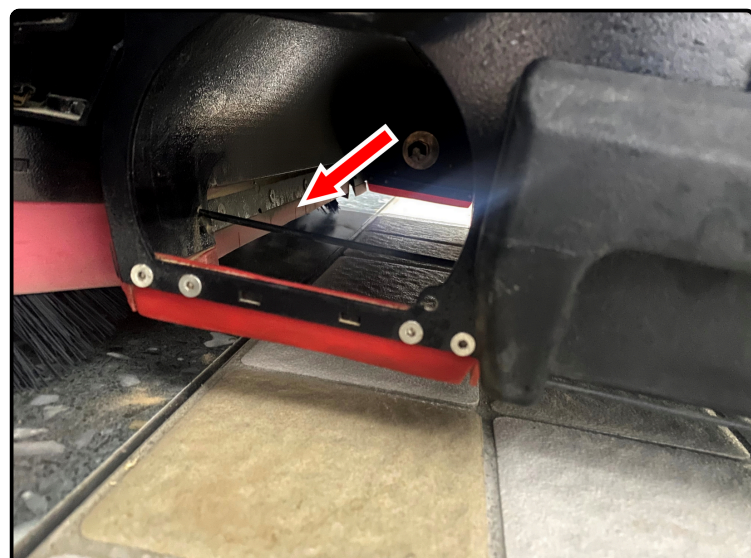

Check and clean the remaining debris in the baffle.



Rotate the retainer knobs in the direction of the arrow, pull the brushes down and clean them.

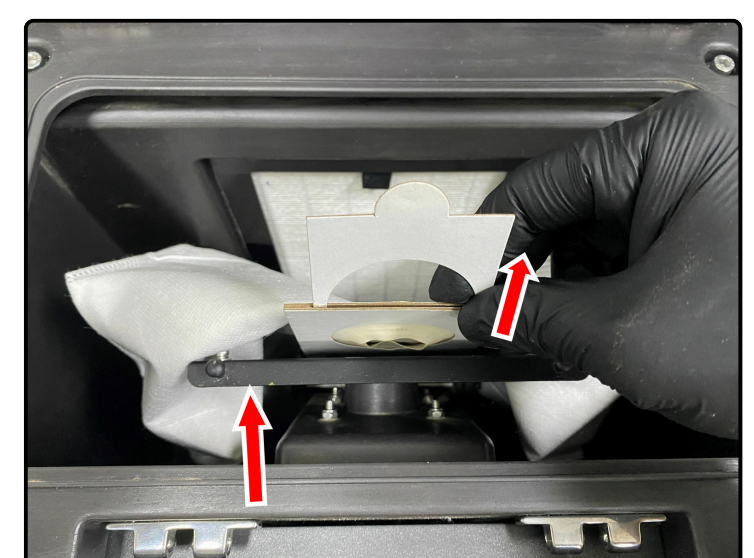

Open the dustbin lid and replace the dust filter bag.